

# Samsung DTB-H390V/XEE

## **Programkort**

1. Input with chip downwards.

## **Pinkode**

1. Press 1234, if you haven't changed code

## **Kanalsøgning**

When you are in menu / Channel mode press

1. Automatic or manual search
2. Push start to search.

## **Gendan fabriksindstillinger**

1. Menu on remote
2. Settings in menu
3. Reset to defaults
4. Pin (1.2.3.4)
5. Confirm

## **Kontroller signalstyrken**

Press info button on remote, three times

## **Kontroller programkortet**

1. Menu on remote
2. Settings in menu
3. Viaccess

## **Lav favoritliste**

1. Press enter on remote
2. Press yellow button